
STEALTH

High Pressure Air Tank

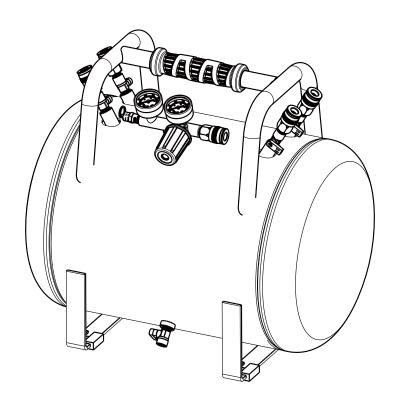

OPERATOR'S MANUAL

CAUTION: To Reduce The Risk Of Injury, User Must Read And Understand Operator's Manual. Save These Instructions For Future Reference.

Toll Free Helpline: **1-888-899-0146**

TABLE OF CONTENTS

Table Of Contents	2
Safety Information	2-3
Overview	4
Operating Instructions	5-7
Maintenance	8
Warranty	9

SAFETY INFORMATION



DO NOT OPERATE THIS UNIT UNTIL YOU READ AND UNDERSTAND THIS INSTRUCTION MANUAL FOR SAFETY, OPERATION, AND MAINTENANCE INSTRUCTIONS



WARNING



This air tank is designed to safely hold 225 PSI of tank air. Over filling with air or filling with any other gas may result in personal injury or property damage. Fill tank with air only from a low pressure tank or service station.



RISK OF PERSONAL INJURY. Wear safety glasses. Never spray tank air or material at self or others. Do not use tank air for breathing. Keep the children away from air tank all the time. Do not use tank air for breathing. Keep the children away from air tank all the time.



Do not wear loose clothing or jewelry as they can be caught in moving parts. Protective gloves and nonskid footwear are recommended. Wear restrictive hair covering to contain long hair.



Do not fill Air Tank with anything other than air. Do not overinflate. Do not exceed the maximum pressure rating of any inflatable object. Check pressure frequently during inflation. The Air Tank should be examined periodically. If any damage to the welds is noted do not use the tank.



The brass components of this product contain lead, a chemical known to the State of California to cause birth defects (or other reproductive harm). (California Health & Safety code § 25249.5, et seq.)



Do not tamper with pressure relief valve. Do not modify tank or components.

▲ WARNING: This product can expose you to chemicals including lead, which is known to the State of Californiato cause cancer, birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.



SAVE THESE INSTRUCTIONS


This manual contains important safety and operating instructions. Read all instructions and follow them with use of this product.

SAFETY INFORMATION

Before Operating

- Before using any tool, any part that appears damaged should be carefully checked to determine that it
 will operate properly and perform its intended function.
- 2. Before operating your Air Tank, check for damaged parts.
- 3. Do not exceed the maximum PSI air pressure.
- 4. Use compressed air only.
- 5. When filling the tank, do not over-pressurize.
- Do not over inflate. Never exceed the maximum pressure rating of any inflatable. Check pressure frequently during inflation.
- Pull the Safety Pressure Bypass Valve prior to operation to ensure that the valve is functioning properly and to clear the value of any possible obstructions.
- 8. Beware of possible explosion. The unit is capable of producing compressed air at high pressure which could cause tires, toys or other inflatables to explode. This could result in serious injury.
- Store idle equipment. When not in use, tools must be stored in a dry location to prevent damage from the elements.
- 10.Do not fill from any compressed gas cylinder.
- 11. Only fill with air from a service station or low pressure air compressor.
- 12. Do not expose the Air Tank to severe moisture or extreme heat.
- 13.If a leak should develop in Air Tank, discard immediately. Do not attempt to repair a damaged Air Tank.
- 14. This product is not a toy. Do not allow children to play with or near this item.
- 15. Use for intended purpose(s) only.
- 16. Inspect before every use; do not use if parts are loose or damaged.
- Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact us at 1-888-899-0146.

OVERVIEW

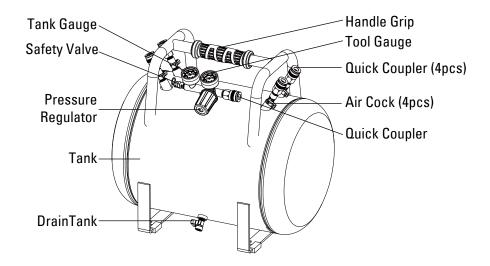

Product Specifications

PRODUCT NUMBER	9001081
TANK SIZE(TOTAL)	10 U.S.Gallons (38L)
MAXIMUM	225PSI
WEIGHT	40.8 lbs (18.5kg)

- This product has been shipped completely assembled. When unpacking inspect the air tank carefully to make sure no breakage or damage occurred during shipping.
- If any parts are missing or broken, please call 1-888-899-0146 as soon as possible. Read the ENTIRE SAFETY GUIDELINES section at the beginning of this document including all text under subheadings therein before set up or use of this product.

Packing Contents

DESCRIPTION	ОТУ	ILLUSTRATION
Air tank	1	
Owner's manual	1	③

OPERATION INSTRUCTIONS

1. To check the safety valve

Before using this tank, pull the ring on the safety valve to make sure that the safety valve operates smoothly (Fig 1). Do not use air tank if the safety valve is stuck or does not operate smoothly.

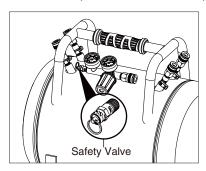


Fig 1

AWARNING: Risk of bursting if the safety valve does not work properly, over-pressurization may occur, causing air tank rupture or an explosion.

2. Right position for using

Alway use the air tank in a stable and secure position to prevent accidental movement of the unit. Never use the air tank on a roof or other elevated position. Never use on a ladder or unstable support. Use an additional air hose to reach high location.

 $oldsymbol{\mathbb{A}}\mathsf{WARNING:}$ An air tank can fall from a table, workbench, or roof causing damage to the air tank and could result in serious injury or death to the operator.

3. Temperature

Operating temperatures are between 32°F and 104°F (0°C and 40°C).

CAUTION: Never operate in temperatures below 32°F (0°C) or above 104°F (40°C).

Drain tank pressure completely before transport the air tank. Transport the air tank in the When transporting the air tank, grasp the handle.

WARNING:

Risk of unsafe operation. Ensure proper footing and use caution when carrying air tank to avoid a loss of balance.

WARNING:

Do not use tank for the storage of compressed gases other than air. If the tank has changed shape in any way, discontinue use immediately.

CAUTION: Replace fittings if leaking or physically damaged in any way.

CAUTION: Always drain tank pressure completely before attempting to remove or replace any of the fittings.

OPERATION INSTRUCTIONS

AWARNING: Do not use tank for the storage of compressed gases other than air. If the tank has changed shape in any way, discontinue use immediately.

CAUTION: Replace fittings if leaking or physically damaged in any way.

CAUTION: Always drain tank pressure completely before attempting to remove or replace any of the fittings.

1. Connecting

- (1) Close the air cock (Fig 2).
- (2) Connect the tank by connecting the air hose to one of the four quick couplers on the tank.
- (3) Connect to the application by connecting the air hose to the tank's quick couplers.
- (4) Slowly open the air cocks.

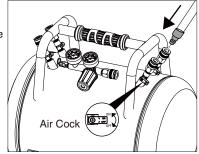


Fig 2

AWARNING: Before connecting the air hose to the tank, make sure that the pressure in the tank is 90 PSI and below (Fig 3).

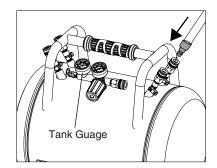


Fig 3

AWARNING: High pressure air could result in death or serious injury. Never operate above maximum operating pressure of the spray gun or tool.

WARNING: Hot air tank surfaces could result in serious injury. Allow compressor to cool before touchina.

WARNING: Do not use an air hose with a maximum working pressure of 225psi or below.

OPERATION INSTRUCTIONS

2. Adjustment of outlet pressure

Adjust the outlet pressure to the required level by turning the knob of the pressure regulator clockwise to increase the outlet pressure and counterclockwise to decrease it. Tool gauge is provided to show when the required pressure is reached.

When adjusting the pressure, check and make sure that tank gauge for the tank. Tank has the pressure level that is higher than that of the pressure to be adjusted. It is also imperative that you make adjustment by slowly starting up the pressure from the level that is lower than the pressure to be adjusted.

3. Disconnecting

- (1) Connect the air hose to the coupler and open the air cock to completely release the air in the tank
- (2) Close the air cock (Fig 4).
- (3) Disconnect the air hose from the quick couplers (Fig 4).

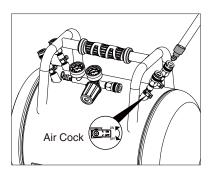


Fig 4

f A f WARNING: Risk of serious eye injury from moisture and debris. Always wear ANSI Z87.1 safety goggles.


f AWARNING: High pressure air could result in death or serious injury. Shut off unit, unplug and release air pressure prior to servicing.

AWARNING: High pressure air containning water condensation could result in minor or result in minor or moderate injury. Do not spray at any person.

MAINTENANCE

Procedure for draining condensation from tank:

- 1. Regularly drain water condensation from tank, which can lead to internal corrosion and damage to the tank. To drain, keep all air cocks to the "OFF" position (Fig 5).
- 2. Turn air pressure regulator knob counter-clockwise to set the outlet pressure to zero (Fig 5).
- 3. Completely release the air in the tank through the air hose connected to the air tank.
- 4. Place suitable container under unit to catch water.
- 5. Slightly tilt unit and turn drain valve counter-clockwise to open (Fig 6).
- 6. After the water has been drained, close the drain valve (clockwise) (Fig 6). The air tank can now be stored.

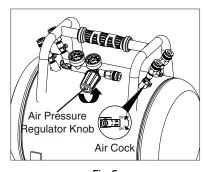

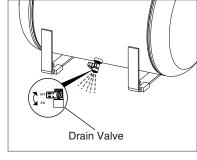


Fig 5

Fig 6



AWARNING: | FAILURE TO PROPERLY DEPRESSURIZE THE TANK BEFORE PROCEEDING MAY RESULT IN SERIOUS PERSONAL INJURY.

STORING YOUR PORTABLE AIR TANK

Store in a dry, dust-free location away from children and any flammable materials.

AWARNING: If there is any question about a condition being safe or unsafe. Do not OPERATE THE TOOL.



STEALTH WARRANTY

LIMITED 1YR WARRANTY

Warranty covers any defects in materials or workmanship of the enclosed product.

Alton Industry Ltd. Group will repair or replace any defective materials due to

craftsmanship of the product.

THIS WARRANTY DOES NOT COVER ANY PROBLEM CAUSED BY MISUSE,
ABUSE, ACCIDENTS OR ACTS OF GOD, SUCH AS FLOODS OR HURRICANES.
CONSEQUENTIAL AND INCIDENTAL DAMAGES ARE NOT COVERED UNDER
THIS WARRANTY. HUMAN DAMAGE AND DISASSEMBLY WILL NOT BE
COVERED BY THE WARRANTY.

If you feel you have a defective product, please submit a copy of your receipt to the address below and call 1-888-899-0146 for instructions prior returning this item to the store or sending back to:

Alton Industry Ltd. Group 1031 North Raddant Rd Batavia, Illinois 60510

We will inspect the product and contact you within 72 hours to give you the results of our inspection. We reserve the right to repair or replace the product at our discretion. However, we may replace the product with one of similar but not exact features. Parts and Service Information available call Alton Industry at 1-888-899-0146.

This warranty gives you specific legal rights. You may have other rights which vary from state to state.

WWW.StealthCompressors.com/Register

SAVE YOUR RECEIPTS - THIS WARRANTY IS VOID WITHOUT PROOF OF PURCHASE